



MICROCHIP

Operation Guide Line
of
eCN system
(Initial Release of Test Program)

Thanet Chantha-arporn
17 September, 2012



Concept of eCN


What is eCN?

eCN system :
electronics Change Notice system

The eCN is the electronics document system via the Microsoft SharePoint software.

Its main purpose is for replace the older paper CN / Lotus Notes document system that is used for release all concerned items with test program, especially “PSI Test Revisions” and “Test Program ID”

Example : Submit & Approval Flow

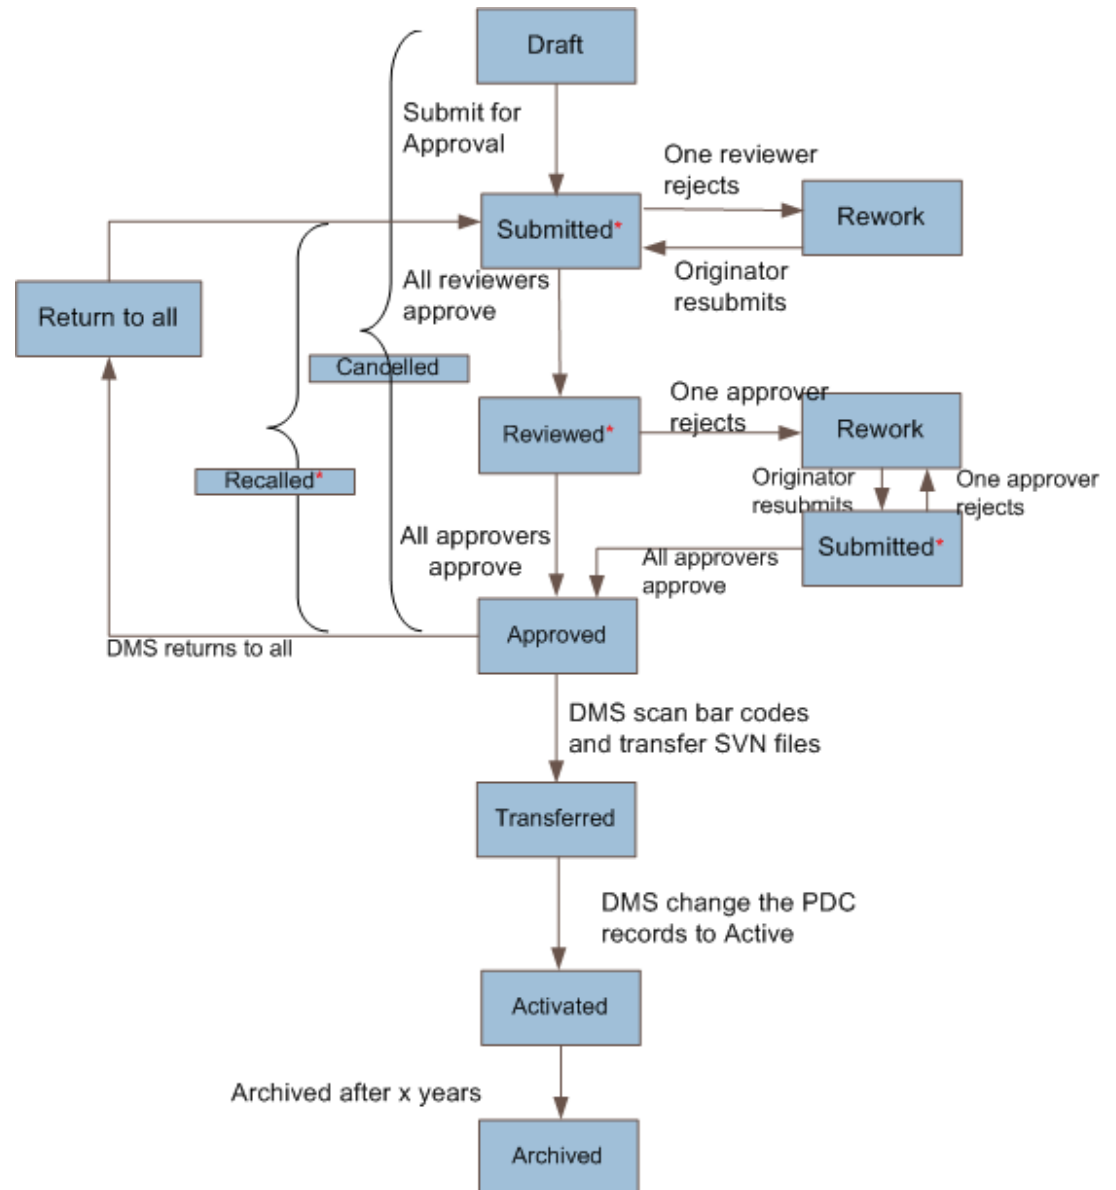



Item 1 : How to prepare all necessary information

Purpose

To prepare all necessary information for issuing the eCN to release PSI and/or test program ID.

Where is the current step?



Necessary information

All concerned remaining information that have to get before starting to issue the eCN are,

- **PSI Test Revisions** : Test Flows
- **PSI Test Revisions** : Test Hardware Options
- **Test Program ID** : Program Revision




Step 1 : How to get PSI Test Revisions : “Test Flow Options” report (1)

Where : “Approval Helper” web page.

(Link = <http://mth-sv-anchor/MthaiFinalTest/BaanApprovalHelper.aspx>)

1.1) Launch the “Approval Helper” web page. The default screen is like this figure.

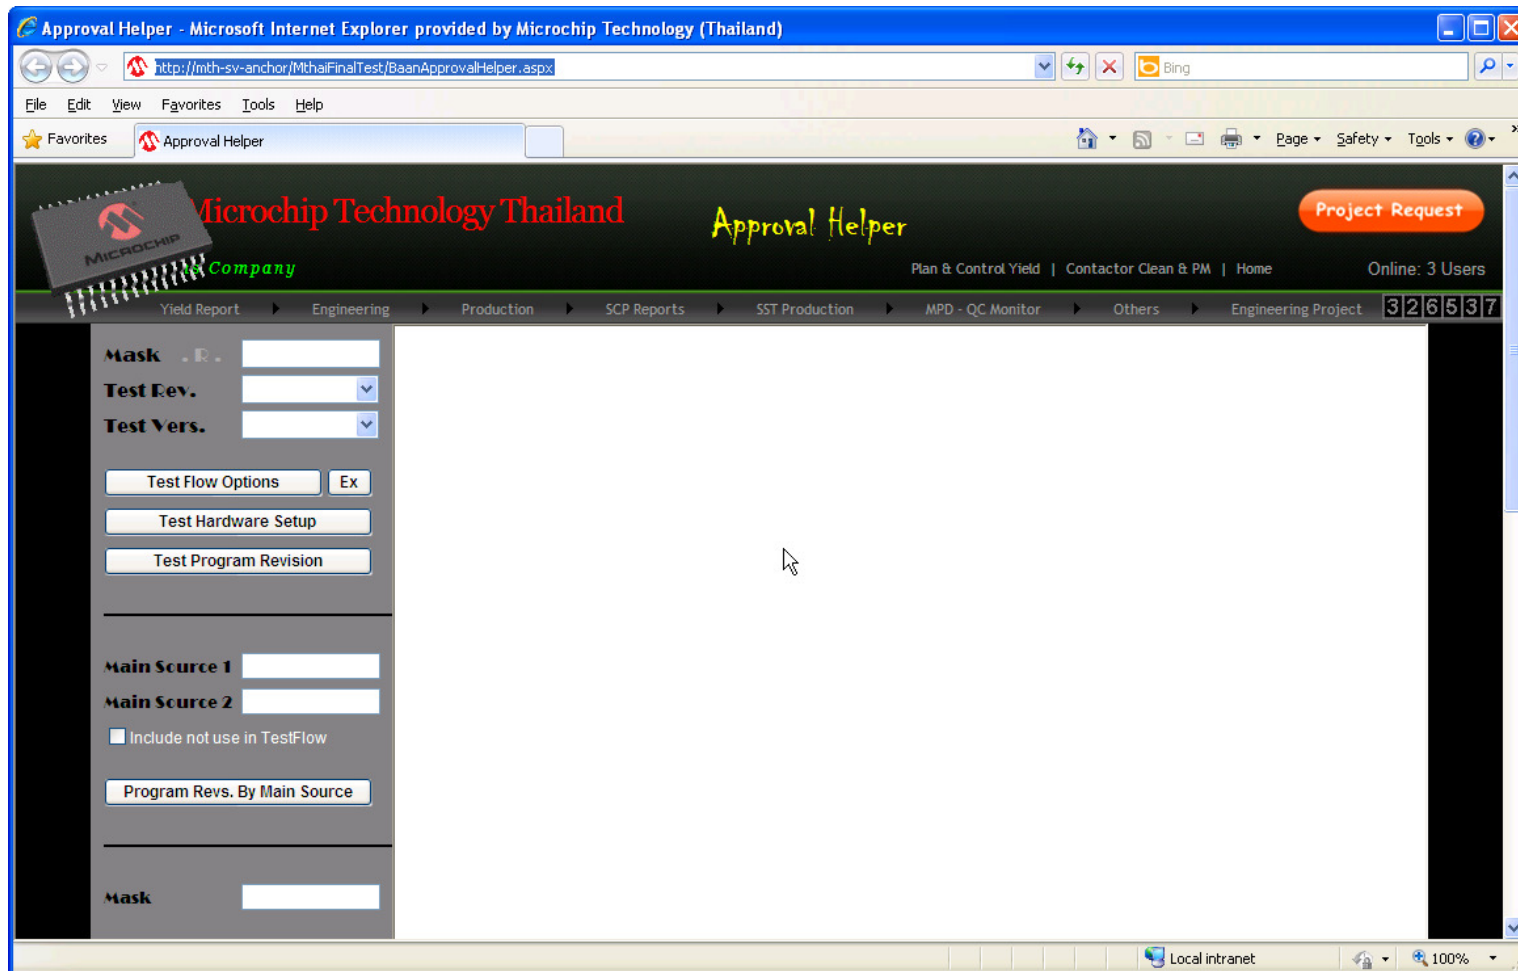




Step 1 : How to get PSI Test Revisions : “Test Flow Options” report (2)


1.2) Fill up and specify the required test program revision and version that would be filtered.

Example

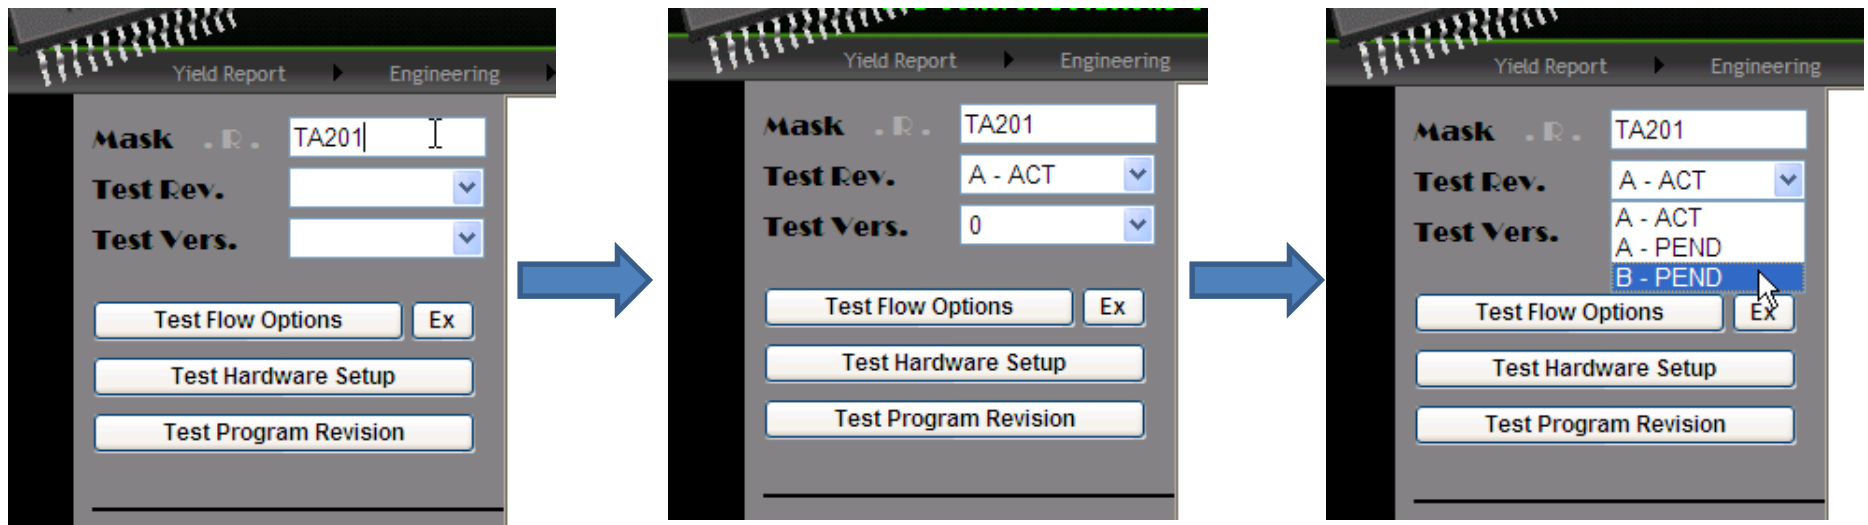

1.3) Re-check that the current selection is Test Version “0” that is for production testing.

When everything is right, then clicking the “Test Flow Options” button to generate the report.

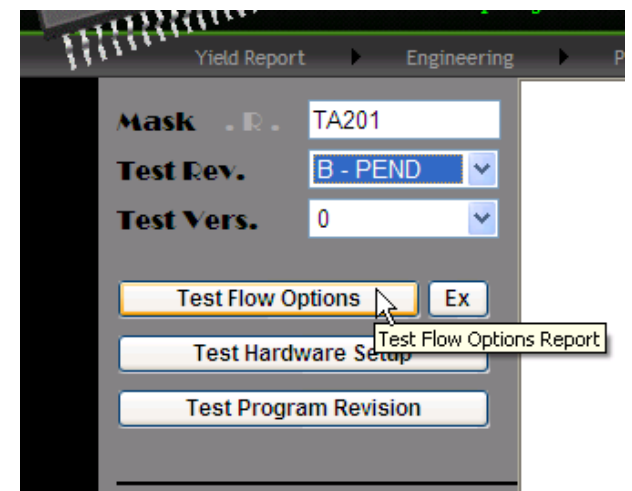



Step 1 : How to get PSI Test Revisions : “Test Flow Options” report (3)

1.4) The “Test Flow Options” report is as the following example. Click the “Export to PDF” button to save into pdf format which can be attached with eCN.

Example

Test Flow Options

Mask: TA201 Revision: B Version: 0 CN#: Date Mod: 08/21/2012
Status: PEND Time Mod: 0:24:46
User Mod: b00404

Change Comment: Initial Release Subcon Test Flow Groups

Flow Group: CAP1006 - FT/QC@25C

Flow # 216723 CAP1006 : FT@25C --> QC@25C (FQ) STD
Strip Flow = 'No' Subcon = 'Yes' Monitor = 'No'

Tester	Checksum Rule	Prog ID	Description	Recipe Time	Instr
EX_HCOVI	N/A	119807	CAP1006-EX-SRM-FT-QC	0	NOTE: Please see "Program Revs by Mask" report for program details.
FUSION_MX	N/A	119808	CAP1006-EX-SRM-FT-QC	0	NOTE: Please see "Program Revs by Mask" report for program details.

Flow Group: CAP1028 - FT/QC@50C

1.5) Select the folder to save this report.

File Download

Do you want to open or save this file?

Name: Test Flow - TA201.pdf
Type: Adobe Acrobat Document
From: mth-sv-anchor

Open Save Cancel

While files from the Internet can be useful, some files can potentially harm your computer. If you do not trust the source, do not open or save this file. [What's the risk?](#)

Save As

Save in: Test Flow Options

File name: Test Flow - TA201.pdf
Save as type: Adobe Acrobat Document

Save Cancel

Name	Size	Type
Test Flow - TA201.pdf	60 KB	Adobe Acrobat Doc...



Step 2 : How to get PSI Test Revisions : “Test Hardware Options” report (1)

Where : “Approval Helper” web page.

(Link = <http://mth-sv-anchor/MthaiFinalTest/BaanApprovalHelper.aspx>)

2.1) Fill up and specify the required test program revision and version that would be filtered.

2.2) Re-check that the current selection is Test Version “0” that is for production testing.

When everything is right, then clicking the “Test Hardware Setup” button to generate the report.

Example

The screenshot shows a web interface titled "Yield Report". It contains the following fields and buttons:

- Mask**: TA201
- Test Rev.**: B - PEND (dropdown menu)
- Test Vers.**: 0 (dropdown menu)
- Buttons**: "Test Flow Options", "Ex", "Test Hardware Setup" (highlighted with a mouse cursor), and "Test Program Revision".



Step 2 : How to get PSI Test Revisions : “Test Hardware Options” report (2)

2.3) The “Test Hardware Options” report is as the following example. Click the “Export to PDF” button to save into pdf format which can be attached with eCN.

Example

Yield Report > Engineering > Production > SCP Reports > SST Production > MPD - QC Monitor > Others > Engineering Project

Mask: TA201
Test Rev.: B - PEND
Test Vers.: 0

Export to PDF

Test Hardware Options

Mask:	TA201	CN#:		Date Mod:	08/21/2012
Revision:	B	Status:	PEND	Time Mod:	0:24:46
Version:	0	User Mod:	b00404		

Lead/Config: 10 VDFN_3X3

Setup#	Tester	Handler	Loadboard :	Dutboard :
3	EX_HCOV1	SRM	Contactor :	Channelmap :
Setup#	Tester	Handler	Loadboard :	Dutboard :
4	FUSION_MX	SRM	Contactor :	Channelmap :

Lead/Config: 20 QFN_4X4

Setup#	Tester	Handler	Loadboard :	Dutboard :
55	EX_DIGITAL	DPH	Contactor :	Channelmap :

Lead/Config: 24 QFN_4X4

Setup#	Tester	Handler	Loadboard :	Dutboard :
5	EX_DIGITAL	DPH	Contactor :	Channelmap :

2.4) Select the folder to save this report.

File Download

Do you want to open or save this file?

Name: Test Hardware Options - TA201.pdf
Type: Adobe Acrobat Document
From: mth-sv-anchor

Open Save Cancel

While files from the Internet can be useful, some files can potentially harm your computer. If you do not trust the source, do not open or save this file. [What's the risk?](#)

Save As

Save in: Test Hardware Options

File name: Test Hardware Options - TA201.pdf
Save as type: Adobe Acrobat Document

Save Cancel

Name	Size	Type
Test Hardware Options - TA201.pdf	48 KB	Adobe Acrobat Doc...



Step 3 : How to get PSI Test Revisions : “Test Program Revision” report (1)

Where : “Approval Helper” web page.

(Link = <http://mth-sv-anchor/MthaiFinalTest/BaanApprovalHelper.aspx>)

3.1) Fill up and specify the required test program revision and version that would be filtered.

3.2) Re-check that the current selection is Test Version “0” that is for production testing.

When everything is right, then clicking the “Test Program Revision” button to generate the report.

Example

Yield Report

Mask . R . TA201

Test Rev. B - PEND

Test Vers. 0

Test Flow Options Ex

Test Hardware Setup

Test Program Revision

Select Tester Type

All Tester Type

FUSION_MX

EX_DIGITAL

EX_HCOVI

Continue



Step 3 : How to get PSI Test Revisions : “Test Program Revision” report (2)

3.3) The “Test Program Revision” report is as the following example. Click the “Export to PDF” button to save into pdf format which can be attached with eCN.

Example

Yield Report > Engineering > Production > SCP Reports > SST Production > MPD - QC Monitor > Others > Engineering Project

Mask: TA201
Test Rev.: B - PEND
Test Vers.: 0

Test Flow Options Ex
Test Hardware Setup
Test Program Revision

Main Source 1
Main Source 2
 Include not use in TestFlow
Program Revs. By Main Source

Export to PDF 1 / 1 Main Report 100%

Program Revs by Mask TA201

TESTER: EX_DIGITAL




Program ID	Rev	Vers	Date Mod	Time Mod	Main Source	Executable	Checksum	BIN Group	Status
119803	A	0	08/21/2012	20:42:26	cap10281_ex_rva0c.eva	N/A		SMSC COM1	PEND
119804	A	0	08/21/2012	20:45:18	cap10661_ex_octal_rvb0c.eva	N/A		SMSC COM1	PEND
119805	A	0	08/21/2012	20:46:10	QC_cap10661_ex_octal_rvb0c.eva	N/A		SMSC COM1	PEND
119806	A	0	08/21/2012	20:43:34	cap10881_ex_octal_rvb0c.eva	N/A		SMSC COM2	PEND

TESTER: EX_HCOVI

Program ID	Rev	Vers	Date Mod	Time Mod	Main Source	Executable	Checksum	BIN Group	Status
119807	A	0	08/21/2012	20:33:21	cap10061_ex_srm_rvc0f.eva	N/A		SMSC COM1	PEND

TESTER: FUSION_MX

3.4) Select the folder to save this report.

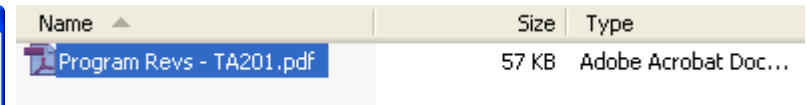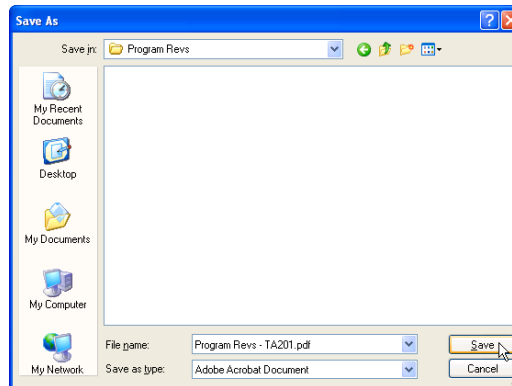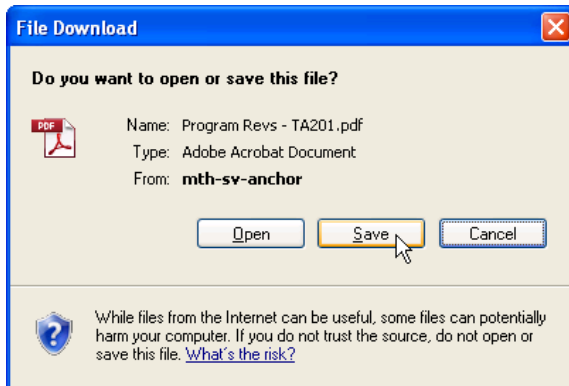



Item 2 : How to issue the eCN for initial release of test program

Purpose

To issue the eCN to and get the approval for activation the PSI and/or test program ID.

Where is the current step?



Necessary information

All concerned information depend on what item is released by the eCN.

Example

- **PSI Test Revisions** : Test Flows
- **PSI Test Revisions** : Test Hardware Options
- **Test Program ID** : mchpSVN Traveler (Get from submitting the mchpSVN step)
- **Test Program ID** : Program Revision



Step 1 : How to issue the eCN for initial release of test program (1)

Where : “eCN (Home Test Program)” web page.

(Link = <http://mchpweb/dms/TestProgram/default.aspx>)

1.1) Launch the “eCN” web page. The default screen is like this figure.

The screenshot shows the 'Home Test Program' web page. The browser title is 'Home Test Program - Microsoft Internet Explorer provided by Microchip Technology (Thailand)'. The address bar shows the URL 'http://mchpweb/dms/TestProgram/default.aspx'. The page content includes:

- Test Program** header with a search bar and 'Site Actions' dropdown.
- Announcements** section: 'Welcome to Test Program CN System' by Louise Tung - C07585, dated 3/20/2012 9:27 PM. A red warning message states: 'Windows and IE 7 or 8 are preferred for this application.'
- My To-Do List** section: A message 'If you don't see your file, press [Refresh] button to refresh your To-Do List.' with a 'Refresh' button. Below it, it says 'No items were found for user: MCHP-MAIN\B10535.'
- My Test Program CNs** section: A table with the following data:

Type	Name	Peer Reviewer	Approver	CN Current Status	Masks Selected	Review Cycle	Originator
	TRP201200TP	Terdsak Somboonchan - B00404	Chau Bui - C09264 Ganesh Ponram - C11157 Terdsak Somboonchan - B00404	Activated	UGC01, TA201	1	Thanet Chantha-arporn - B10535



Step 1 : How to issue the eCN for initial release of test program (2)

1.2) Click the new button to create the new blank eCN form.

The screenshot shows the 'My Test Program CNs' section of the application. At the top, there are 'Announcements' and a 'My To-Do List'. Below these, the 'My Test Program CNs' section features a table with columns for 'Type', 'Name', 'Peer Reviewer', and 'Approver'. A toolbar above the table contains 'New', 'Upload', and 'Actions' buttons. A mouse cursor is clicking on the 'New' button.

Type	Name	Peer Reviewer	Approver
	TRP201200TP	Terdsak Somboonchan - B00404	Chau Bui - C09264 Ganesh Ponram - C11157 Terdsak Somboonchan - B00404

Note

Not only this method, another way is select the drop down command, then selecting the "TestProgramCNForm".

The diagram illustrates the process of selecting a form type from the 'New' dropdown menu. On the left, the 'New' button is clicked, opening a dropdown menu. On the right, the 'TestProgramCNForm' option is selected, which is highlighted in yellow. The dropdown menu also shows the text 'Create a new TestProgramCNForm' and the user's name 'han - B00404'.



Step 1 : How to issue the eCN for initial release of test program (3)

Product(s)/Mask(s) affected	Revision	Version	Date	Time
TA221	0	0	6/21/2012	00:24:46

1.3) Fill up each section into the new blank eCN form. Normally, it could be classified into 3 sections.

- **Change Details**

Input all information about detail of the changes of this eCN issuing. For example, Concerned mask, Complexity, etc.

- **Specifics of Change**

Input the reason, verification methods and all concerned information.

- **Containment / Disposition of Material**

Input the information about action with the current concerned material and warehouse and return units.



Step 1 : How to issue the eCN for initial release of test program (4)

Please upload a document to attach/insert.

Test Change Notice (PSI/PDC) Created By: Thanat Chartha-arporn - 810535
Created On: 8/27/2012
CN Status: Draft
CN Number: TR020120100

Home | Attachments | Approver | History

PSI Test Revisions Attachments
For PSI Test Revisions, you must add appropriate attachments to Test Flow and/or Test Hardware Options section(s) below.

Test Flows
File names attached in Test Flow section should begin with "Test Flow" (without the quotes).

Date	Author	File	Comments	Remove
8/27/2012	Thanat Chartha-arporn - 810535	Test Flow - TR020120100.pdf		Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Test Hardware Options
File names attached in Test Hardware Options section should begin with "Test Hardware Options" (without the quotes).

Date	Author	File	Comments	Remove
8/27/2012	Thanat Chartha-arporn - 810535	Test Hardware Options - TR020120100.pdf		Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Other Engineering Data
Attach Other Engineering Data file in this section. Important note: This section should NOT contain Test Program ID attachments!

Date	Author	File	Comments	Remove
				Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Test Program ID Attachments
For Test Program ID, you must select an option to Program Changes or With Program Changes. You must add appropriate attachments to both mCHP SVN and Program Revision Files sections below.

No Program Changes With Program Changes

mCHP SVN Files
For No Program Changes, file names attached in mCHP SVN Files section should begin with "mchpSVN_update" (without the quotes). For With Program Changes, it should begin with "mchpSVN_traveler" (without the quotes).

Date	Author	File	Comments	Remove
8/28/2012	Thanat Chartha-arporn - 810535	mchpSVN_Update - TR020120100.pdf		Remove
8/28/2012	Thanat Chartha-arporn - 810535	mchpSVN_Traveler - TR020120100.pdf		Remove
8/28/2012	Thanat Chartha-arporn - 810535	mchpSVN_Update - TR020120100.pdf		Remove
8/28/2012	Thanat Chartha-arporn - 810535	mchpSVN_Traveler - TR020120100.pdf		Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Program Revision Files
File names attached in Program Revision Files section should begin with "Program Revs" (without the quotes).

Date	Author	File	Comments	Remove
8/28/2012	Thanat Chartha-arporn - 810535	Program Revs - TR020120100.pdf		Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Legacy Attachments
The legacy Attachments section contains attachments from the older version of the form. Newer version of the form has separate sections for attachments.

Date	Author	File	Comments	Remove
				Remove

1.4) Fill up each section into the "Attachment" of eCN form. Normally, it could be classified into 3 sections.

• PSI Test Revisions Attachments

- Attach the "Test Flow Options" report
- Attach the "Test Hardware Options" report
- *Attach the "Other Engineering Data"

Note*

"Other Engineering Data" attachment could be used for Change Type = PSI Test Revisions only

Change Type = Test Program ID or Both are forbidden.

• Test Program ID Attachments

- Attach the "mchpSVN Traveler" file
- Attach the "Test Program Revision" report

• Legacy Attachments

This section is for the older version form (paper format). Normally, we don't attach any files into this section anymore.



Step 1 : How to issue the eCN for initial release of test program (5)

Please upload a document to attach/insert.

Close Save Save & Submit

MICROCHIP Test Change Notice (PSI/PDC) Created By: Thanat Chantharaporn - 810333
Created On: 8/27/2012 CN Status: Draft CN Number: TAP20120100

Home Attachments Approver History

Comments:

Send out a delinquency reminder on 8/29/2012 to be repeated 5 times (the reminder email will be CC'd to the signator)

Reviewer Group

Peer Reviewers Terdsak Somboonchan - B00404
Insert Item

Approver Group

Business Unit Test Engineer Chau Bui - C09264
Insert Item

Business Unit Product Engineer
Insert Item

Manufacturing Engineer Terdsak Somboonchan - B00404
Insert Item

Observer Group

Remove Remove

Search User In AD and add to Observer Group Search

DMS Group

Diane Dennis - C12561
Laddawan Pattanapibul - B01861
Suthansa Techasa - B01147
Wartana Kunhanang - B00017

1.5) Fill up each section into the “Approver” of eCN form. Normally, it could be classified into 3 sections.

• Reviewer Group

- Assign the reviewed person of this eCN and all information.
- For initial release test program,
>> Peer Reviewers = [Terdsak Somboonchan-B00404](#)

• Approver Group

- Assign the persons who has the authorization for approval this eCN issuing.
- For initial release test program,
>> Business Unit Test Engineer = [Chau Bui-C09264](#)
>> Business Unit Product Engineer = [Ganesh Ponram - C11157](#)
>> Peer Reviewers = [Terdsak Somboonchan-B00404](#)

• Observer Group

- This section is for assignment members who are indirect for approval but should be acknowledged that there is this new release eCN issuing.
- For initial release test program,
>> Leave “Blank”



Step 1 : How to issue the eCN for initial release of test program (6)

1.6) Re-check all sheets that all necessary information is right and enough. Then, click on “Save & Submit” button to send this report to peer review person.

The form has been saved

The screenshot shows a web interface for a 'Test Change Notice (PSI/PDC)'. At the top, there are navigation buttons: '<<', 'Close', 'Save', and 'Save & Submit'. A mouse cursor is clicking on the 'Save & Submit' button. Below the navigation bar, the Microchip logo is on the left, the title 'Test Change Notice (PSI/PDC)' is in the center, and metadata is on the right: 'Created By: Thanet Chantha-arporn - B10535', 'Created On: 8/27/2012', 'CN Status: Draft', and 'CN Number: TRP20120100'. Below the title bar are tabs for 'Home', 'Attachments', 'Approver', and 'History'. At the bottom, there is a 'Comments:' section.

1.7) If all information is right as the eCN rule and submit process is complete, it will show the successful message as the below figure.

The screenshot shows the same 'Test Change Notice (PSI/PDC)' form, but now the 'CN Status' is 'Submitted'. A message box at the bottom of the form contains the text: 'The Test Program Change Notice (PSI/PDC) has been submitted successfully.' The 'Close' button is visible in the top left corner of the form.



Step 2 : If there is error during "Save & Submit" the eCN

2.1) If there are any errors or incorrect information, the error message will be shown. Then going to correct each items until complete all items. Finally, click "Save & Submit" button.

[Upload unsuccessful. File name should begin with mchpSVN_Update . :], [Upload unsuccessful. File name should begin with mchpSVN_Update . :], [Upload unsuccessful. File name should begin with mchpSVN_Update . :], [Upload unsuccessful. File name should begin with mchpSVN_Update . :], [Business Unit Product Engineer : can not be blank]

Test Change Notice (PSI/PDC)

Created By: Thanet Chantha-arporn - B10535
Created On: 8/27/2012
CN Status: Draft
CN Number: TRP20120100

Home Attachments Approver History

Approver Group

Business Unit Test Engineer Chau Bui - C09264
Insert item
can not be blank

Business Unit Product Engineer *
Insert item

Approver Group

Business Unit Test Engineer Chau Bui - C09264
Insert item

Business Unit Product Engineer Ganesh Ponram - C11187
Insert item

Manufacturing Engineer Terdak Somboonchan - B00404
Insert item

The form has been saved

<< Close Save Save & Submit

Test Change Notice (PSI/PDC)

Created By: Thanet Chantha-arporn - B10535
Created On: 8/27/2012
CN Status: Submitted
CN Number: TRP20120100

The Test Program Change Notice (PSI/PDC) has been submitted successfully.



Step 3 : If needing to recall the eCN for revision (1)

It's possible that the peer reviewed or approval person will find some incorrect or incomplete information, then this eCN must be recalled, revise and re-submit again.

3.1) Going to the home page of eCN, then click on the eCN name that is intended to recall.

Test Program

TestProgram [Search] Advanced Search [Site Actions]

CNs

- By Status
- By Originator
- By Mask
- By Division
- Reviewed
- Approved
- Committed
- My Test Program CNs
- User Manual

Recycle Bin

Announcements

Welcome to Test Program CN System 3/20/2012 9:27 PM
by Louise Tung - C07585
Windows and IE 7 or 8 are preferred for this application.

My To-Do List

If you don't see your file, press [Refresh] button to refresh your To-Do List. [Refresh]

No items were found for user: MCHP-MAIN\B10535.


My Test Program CNs

Type	Name	Peer Reviewer	Approver	CN Current Status	Masks Selected	Review Cycle	Originator
	TRP201200TP	Terdsak Somboonchan - B00404	Chau Bui - C09264 Ganesh Ponram - C11157 Terdsak Somboonchan - B00404	Activated	UGC01, TA201	1	Thanet Chantha-arporn - B10535
	TRP20120100 NEW	Terdsak Somboonchan - B00404	Chau Bui - C09264 Ganesh Ponram - C11157 Terdsak Somboonchan - B00404	Reviewed	TA201	1	Thanet Chantha-arporn - B10535
	TRP20120102 NEW	Terdsak Somboonchan - B00404	Chau Bui - C09264 Ganesh Ponram - C11157 Terdsak Somboonchan - B00404	Submitted	UGC01	1	Thanet Chantha-arporn - B10535




Step 3 : If needing to recall the eCN for revision (2)

3.2) Wait until to finish loading the eCN form.

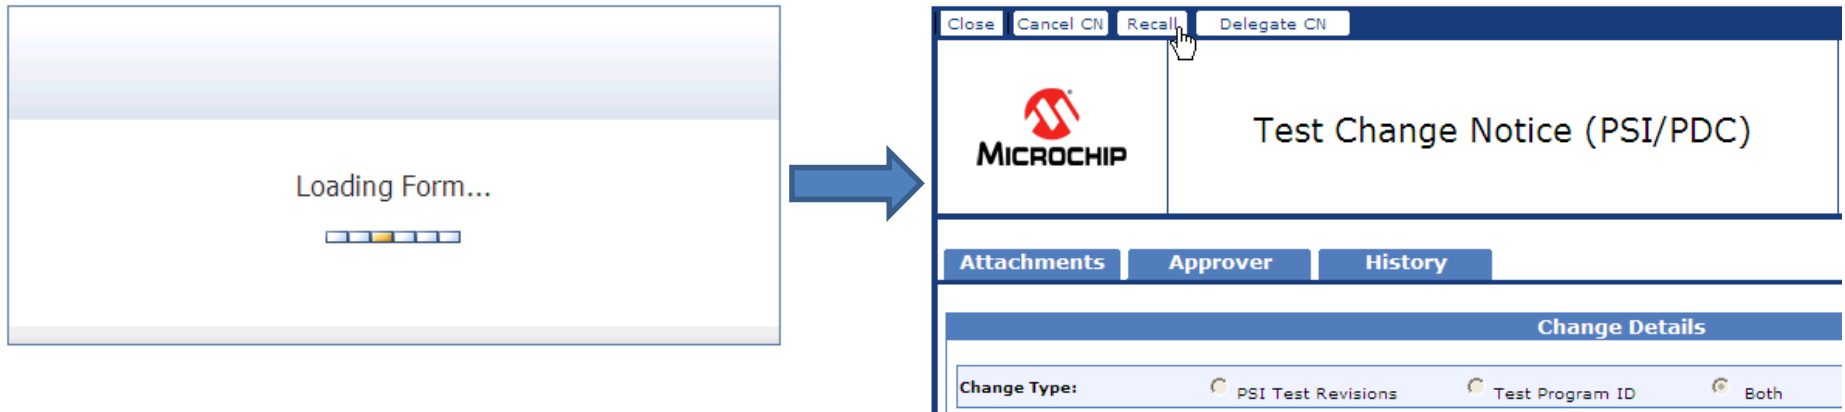

3.3) Wait until it shows the successful message.


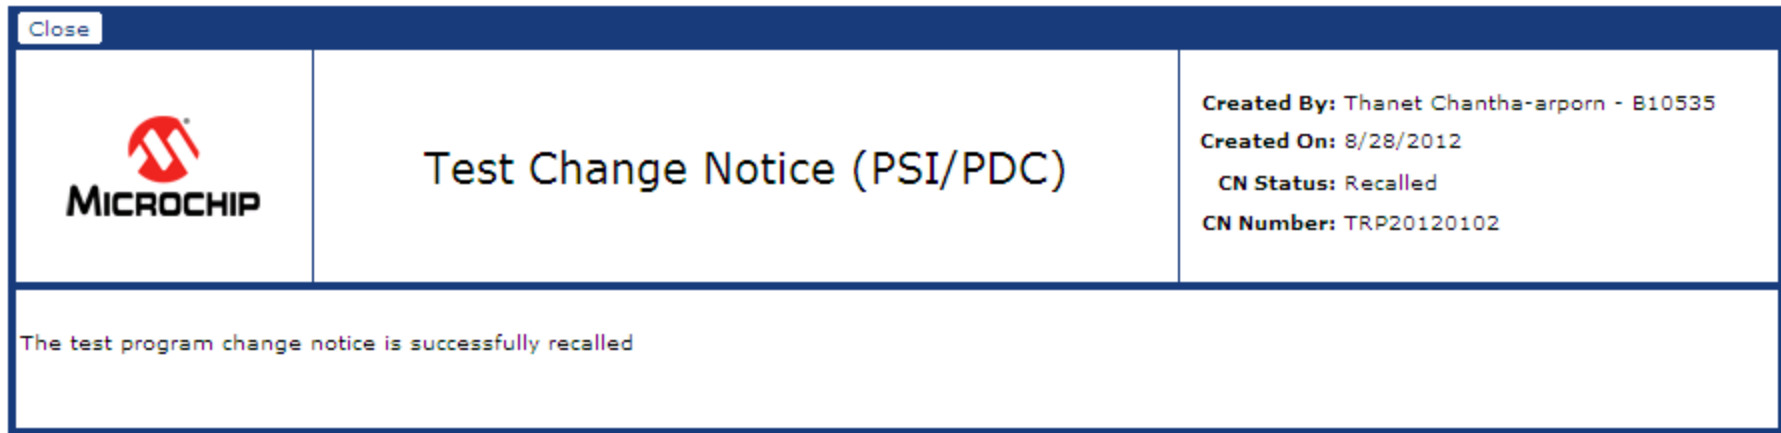




Step 3 : If needing to recall the eCN for revision (3)

3.4) Editing or modification as requirement. For example, adding the “Reasons for Change”.

3.5) When the editing is finished, then click on Resubmit button. Wait until it shows the successful message.

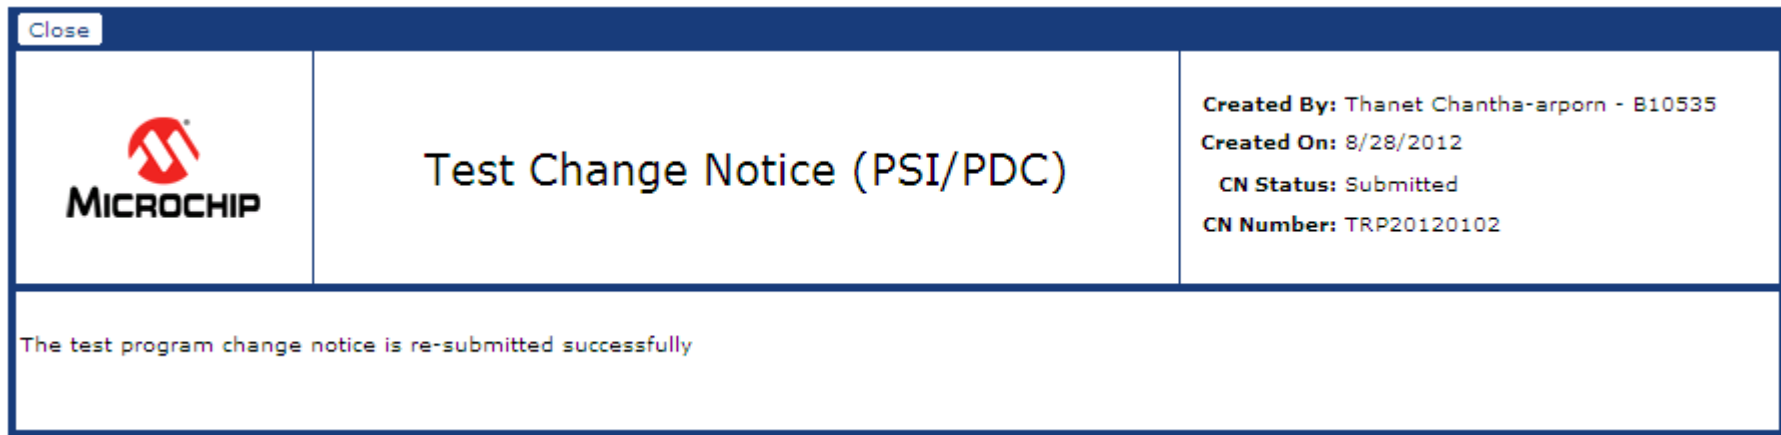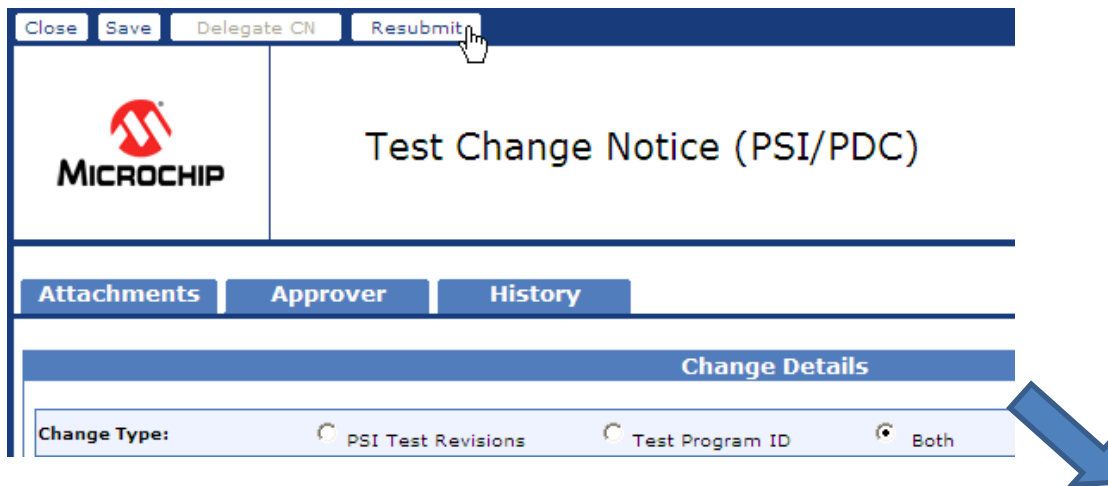

The end.

The end.

Microchip logo and navigation buttons: << Close Save

Test Change Notice (PSI/PDC)

Created By: Thanet Chantha-arporn - B10535
 Created On: 10/17/2012
 CN Status: Draft
 CN Number:

Home **Attachments** Approver History

PSI Test Revisions Attachments
 For PSI Test Revisions, you must add appropriate attachments to Test Flows and/or Test Hardware Options section(s) below:

Test Program ID Attachments
 For Test Program ID, you must select an option No Program Changes or With Program Changes. You must add appropriate attachments to both MCHP SVN and Program Revision Files sections below:

No Program Changes With Program Changes

MCHP SVN Files
 For No Program Changes, file names attached in MCHP SVN Files section should begin with "mchpSVN_Update" (without the quotes). For With Program Changes, it should begin with mchpSVN_Traveler (without the quotes).

Date	Author	File	Comments	
				Remove

Add Attachment: **Insert to Table Above**



PSI Test Revisions Attachments

For PSI Test Revisions, you must add appropriate attachments to Test Flows and/or Test Hardware Options section(s) below:

Test Flows

File names attached in Test Flows section should begin with "Test Flow" (without the quotes).

Date	Author	File	Comments	Remove
				Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Test Hardware Options

File names attached in Test Hardware Options section should begin with "Test Hardware Options" (without the quotes).

Date	Author	File	Comments	Remove
				Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Other Engineering Data

Attach Other Engineering Data File in this section. Important Note: This section should NOT contain Test Program ID attachments!

Date	Author	File	Comments	Remove
				Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Test Program ID Attachments

For Test Program ID, you must select an option No Program Changes or With Program Changes. You must add appropriate attachments to both MCHP SVN and Program Revision Files sections below:

No Program Changes With Program Changes

MCHP SVN Files

For No Program Changes, file names attached in MCHP SVN Files section should begin with "mchpSVN_Update" (without the quotes). For With Program Changes, it should begin with "mchpSVN_Traveler" (without the quotes).

Date	Author	File	Comments	Remove
				Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)

Program Revision files

File names attached in Program Revision Files section should begin with "Program Revis" (without the quotes).

Date	Author	File	Comments	Remove
				Remove

Add Attachment: [Click here to attach a file](#) [Insert to Table Above](#)



Test Flows

File names attached in Test Flows section should begin with "Test Flow" (without the quotes).

Date	Author	File	Comments	
10/8/2012	Thanet Chantha-arporn - B10535	Test Flow - TA401.pdf		Remove

Add Attachment:

Test Hardware Options

File names attached in Test Hardware Options section should begin with "Test Hardware Options" (without the quotes).

Date	Author	File	Comments	
10/8/2012	Thanet Chantha-arporn - B10535	Test Hardware Options - TA401.pdf		Remove

Add Attachment:

Other Engineering Data

Attach Other Engineering Data File in this section. Important Note: This section should NOT contain Test Program ID attachments !

Date	Author	File	Comments	
				Remove

Add Attachment:



Test Program ID Attachments

For Test Program ID, you must select an option No Program Changes or With Program Changes. You must add appropriate attachments to both MCHP SVN and Program Revision Files sections below:

No Program Changes

With Program Changes

MCHP SVN Files

For No Program Changes, file names attached in MCHP SVN Files section should begin with "mchpSVN_Update" (without the quotes). For With Program Changes, it should begin with "mchpSVN_Traveler" (without the quotes).

Date	Author	File	Comments	
10/8/2012	Thanet Chantha-arporn - B10535	mchpSVN_Update-[TA401 FUSION_CX TP.msq		Remove
10/8/2012	Thanet Chantha-arporn - B10535	mchpSVN_Update-[TA401 LTX_D50 TP.msq		Remove

Add Attachment:

[Insert to Table Above](#)

Program Revision files

File names attached in Program Revision Files section should begin with "Program Revs" (without the quotes).

Date	Author	File	Comments	
10/8/2012	Thanet Chantha-arporn - B10535	Program Revs - TA401.pdf		Remove

Add Attachment:

[Insert to Table Above](#)



You replied on 10/3/2012 11:07 AM.

From: Michael Arden - C05783 Sent: Wed 10/3/2012 10:37 AM
To: Terdsak Somboonchan - B00404; Thanet Chantha-arporn - B10535
Cc: Cris Songco; James Wu; Yousef Siddique; Manish Singh; Chau Bui - C09264
Subject: RE: SMSC : Please copy to SVN Folder@2 Oct 2012

- Message
- Commit Notice - AIPD2/TA214.EX_DIGITAL/TP_EQC_CAP1661D (11 KB)
- Commit Notice - AIPD2/TA214.EX_DIGITAL/TP_EQC_CAP1661C (11 KB)
- Commit Notice - AIPD2/TA214.EX_DIGITAL/TP_EQC_CAP1661 (11 KB)
- Commit Notice - AIPD2/TA214.EX_DIGITAL/TP_EQC_CAP11331D (11 KB)
- Commit Notice - AIPD2/TA214.EX_DIGITAL/TP_EQC_CAP11061D (11 KB)
- Commit Notice - AIPD2/TA214.EX_DIGITAL/TP_EQC_CAP1106C (11 KB)

Terdsak/Thanet/Cris - I ran into a couple of problems getting the scripts to load the programs properly.

Anyway, that appears to be working now. I just finished loading 19 programs for the TA214.EX_DIGITAL repository. They all appear to have loaded fine.

URL: file:///chn-dk-c05783/mchpMaster/AIPD2/TA214.EX_DIGITAL

File	Extension	Revision	Author	Size	Date	Lock
file:///chn-dk-c						
TAGS		60	Michael Arden - C05783		10/2/2012 8:26:38 PM	
TEMP		2	Admin		10/2/2012 7:49:02 PM	